

# SEFPRO'S TUTORIAL FOR INSTALLATION

**ERSOL 06**

V03 23 09 14



**SEFPRO**   
BRIGHTER SOLUTIONS TOGETHER  
**MONOLITHICS**

# ERSOL 06 - Tutorial



## Required equipment, preparation, application

### Step #1

Mix one bag  
ERSOL with  
drinkable  
water



ERSOL 06	Water (liter)
----------	---------------

25 kg	2 to 2,5 L
-------	------------

8 to 10% of weight in potable water  
(0,53 to 0,66 Gallon of water for  
55lbs ERSOL 06 cement)

Use a paddle mixer until  
reaching homogeneous mix


### Step #2

- Lay ERSOL 06 between 2 wood cleats
- Flatten ERSOL 06 to 5mm (1/5") thick using a beam
- Remove the wood cleats
- Fill the space left by the cleats

5mm (1/5")  
thickness  
wood cleats



### Step #3

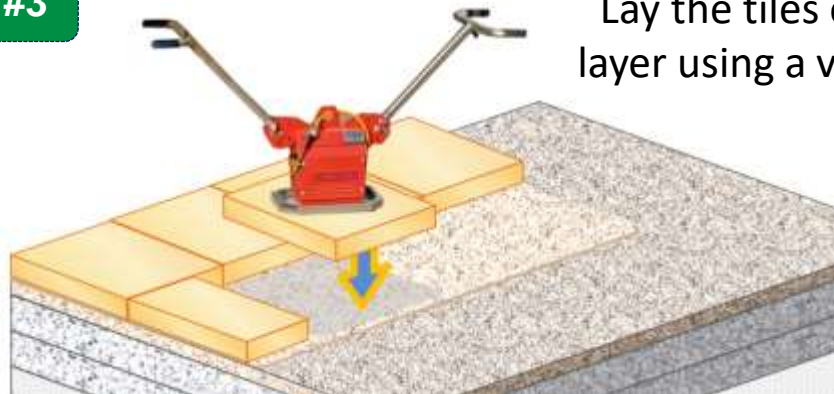

Lay the tiles on ERSOL 06  
layer using a vacuum lifter

ERSOL 06 could be hardened before laying tiles - Contact us -

### Step #4



**Clean out the expansion joints**

*Nettoyer les joints de dilatation*  
*Dehnfugen freilassen*  
*Colocar las baldosas*  
*Posare le piaste*

